


# WINGBURG

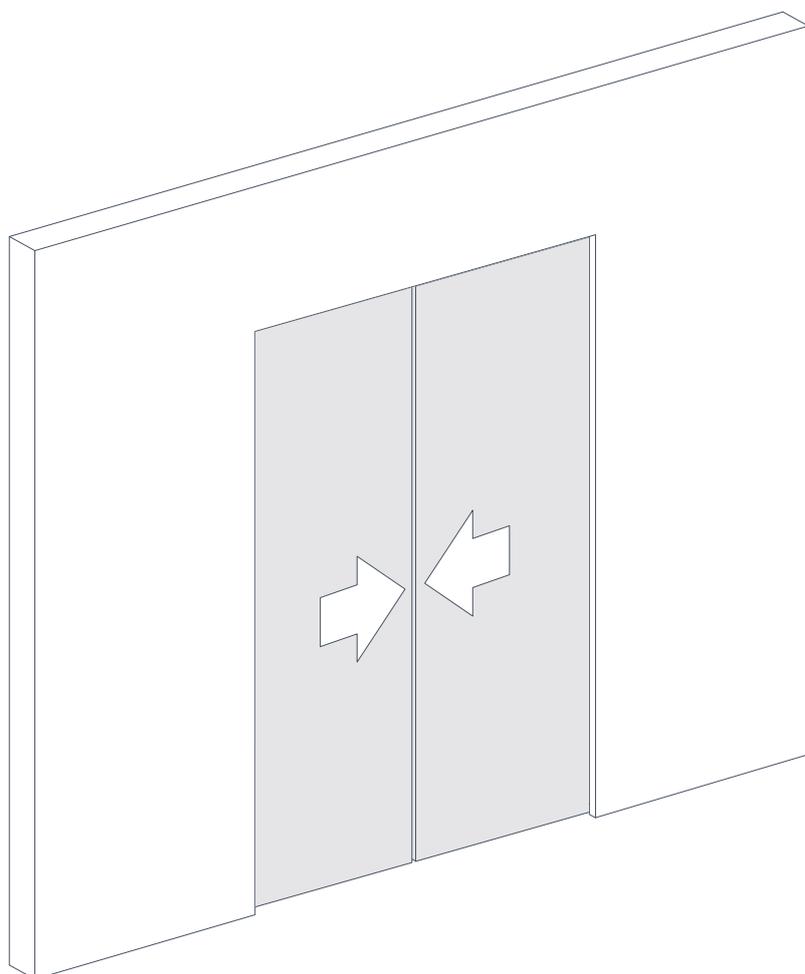

## **ASSEMBLY INSTRUCTIONS**

SYNCHRO FOR WOODEN & GLASS DOORS

BELPORT

Safety instructions	3
Required tools	3
Scope of delivery	4
Removing a rail	8
Equipping a rail	9
Installing a rail	12
Door installation	13
Adjusting limit stops	21
Tensioning the rope	22
Securing the rope	23


## Safety instructions

---

Before assembly, please read the assembly instructions carefully. If you have any difficulties understanding them, contact customer service or your supplier. To be able to assemble the purchased product properly, please use the tools specified on the following page. Since some sheets of metal may have sharp edges, be sure to protect your hands from cuts and work surfaces from scratches. Always work ergonomically during assembly and only assemble it alone if you can rule out any risk to your health or that of other people. All components were checked for integrity by "Wingburg" before delivery. "Wingburg" accepts no liability for damage caused by improper assembly or transport.


## Required tools

---






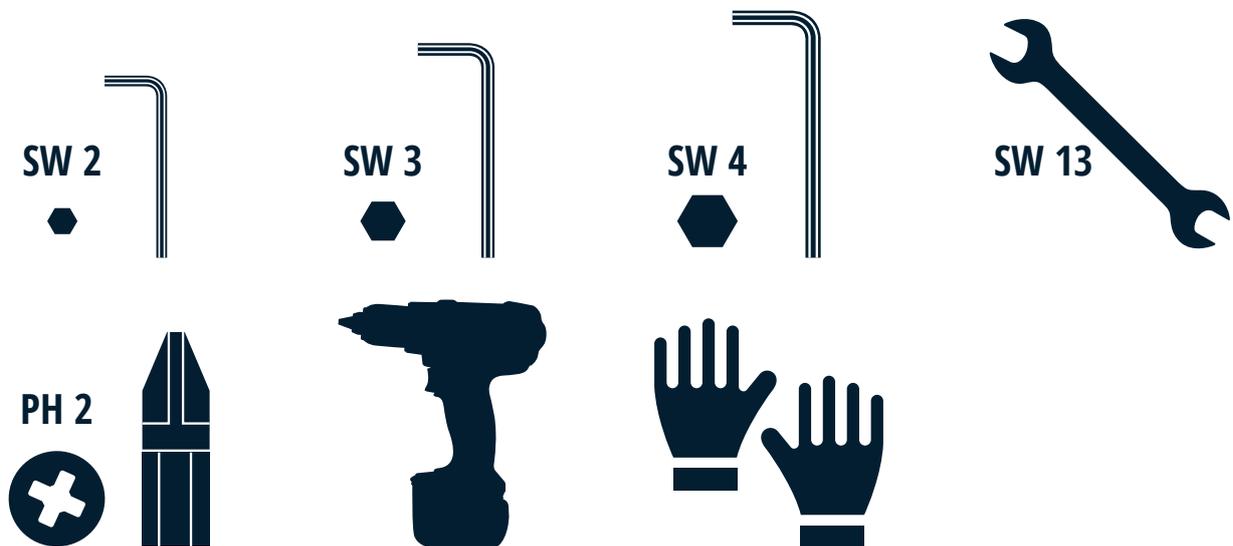


# SCOPE OF DELIVERY | SYNCHRO BELPORT WOOD DOOR

## Overview of components

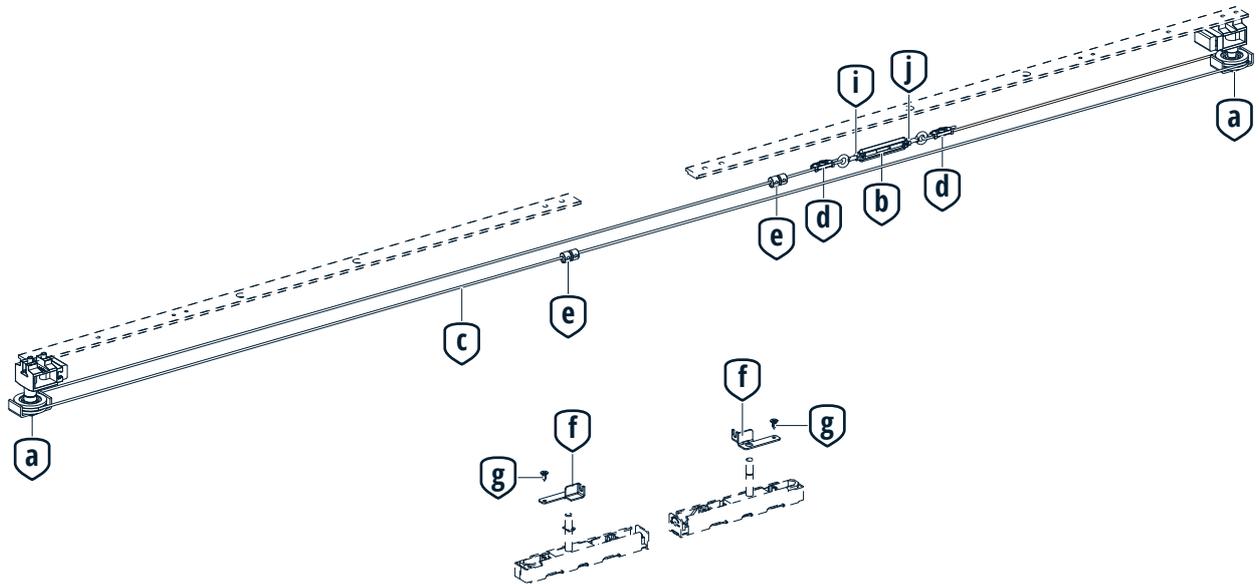


## Components

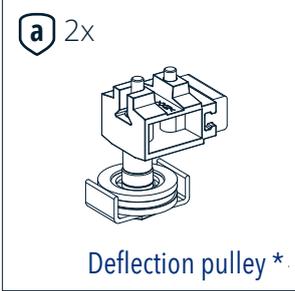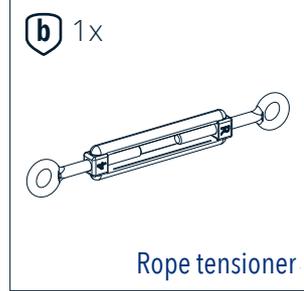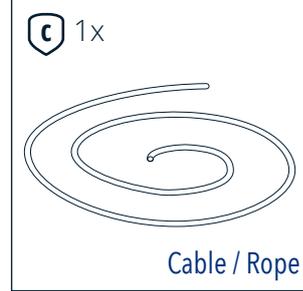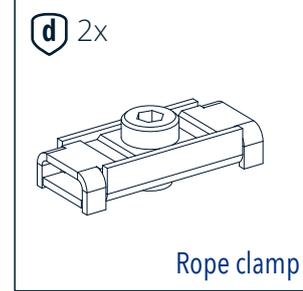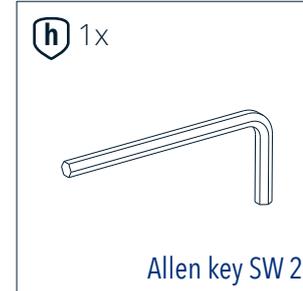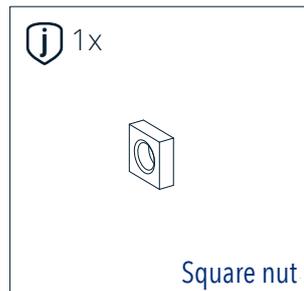 <p><b>a</b> 2x Deflection pulley *</p>	 <p><b>b</b> 1x Rope tensioner</p>	 <p><b>c</b> 1x Cable / Rope</p>	 <p><b>d</b> 2x Rope clamp</p>
 <p><b>e</b> 2x Driver</p>	 <p><b>f</b> 2x Door connection</p>	 <p><b>g</b> 2x Plastic screw</p>	 <p><b>h</b> 1x Allen key SW 2</p>
 <p><b>i</b> 1x Hex nut.</p>	 <p><b>j</b> 1x Square nut</p>		






\* If necessary, already pre-installed in the rail.

# ASSEMBLY | SYNCHRO GLASS DOOR

## Overview of components

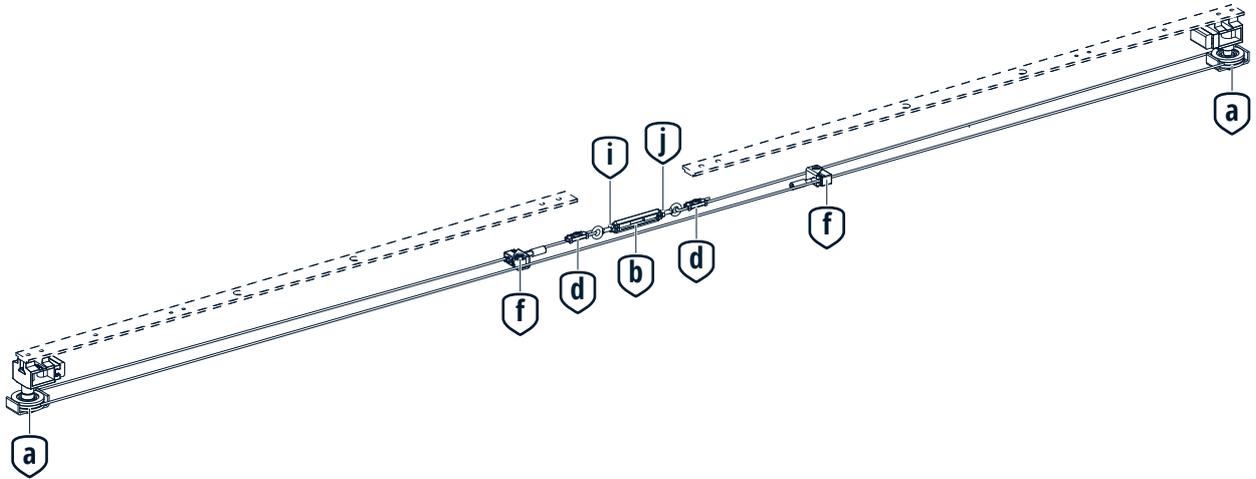



## Components

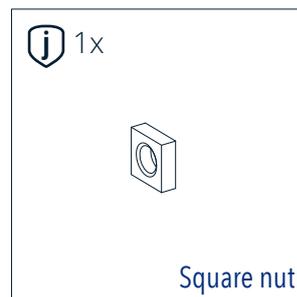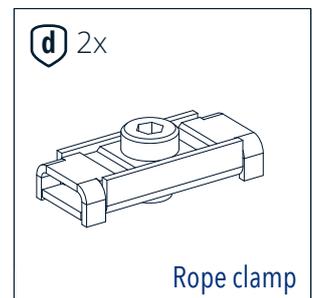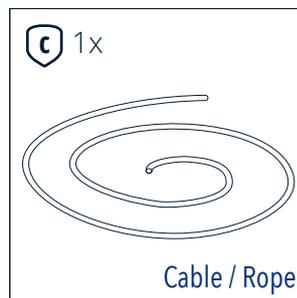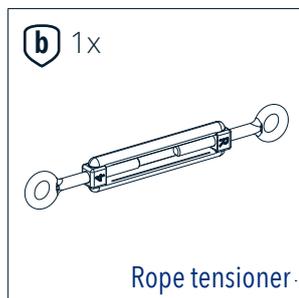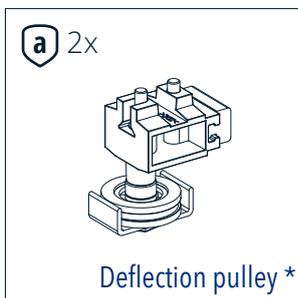



\* If necessary, already pre-installed in the rail.

# ASSEMBLY | SYNCHRO BELPORT


1.

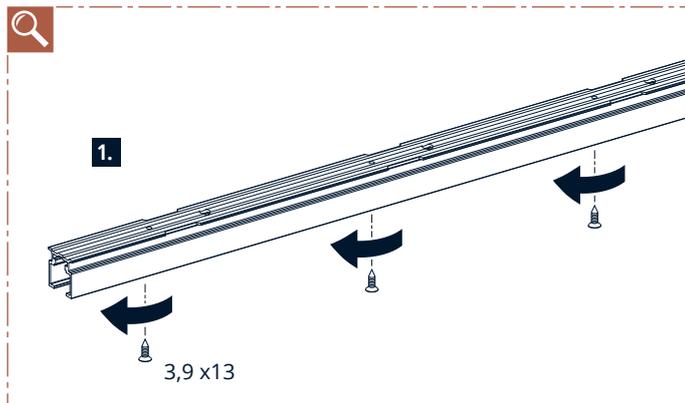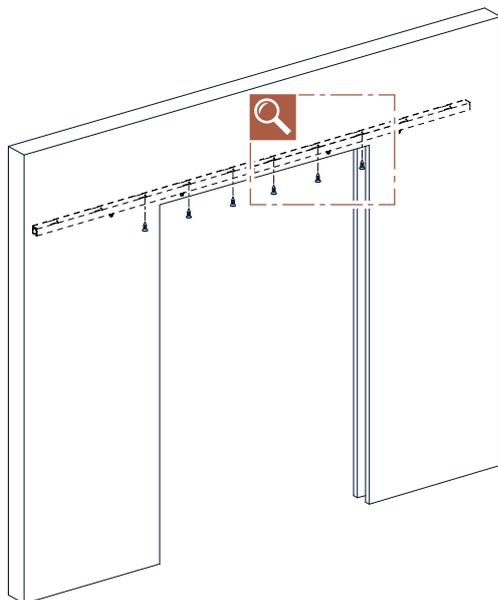


**i** Keep screws safe and reuse in Step 7!

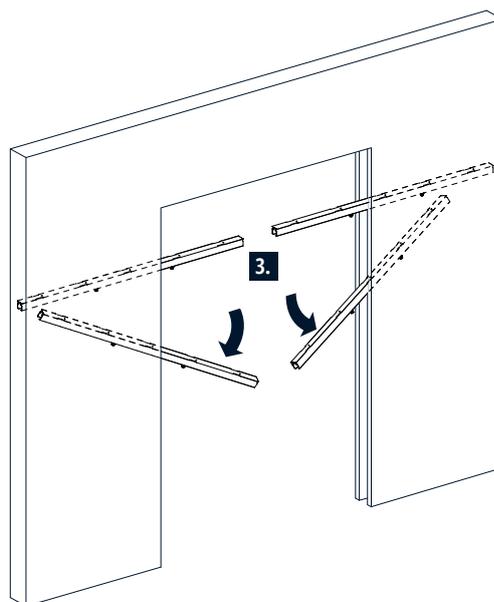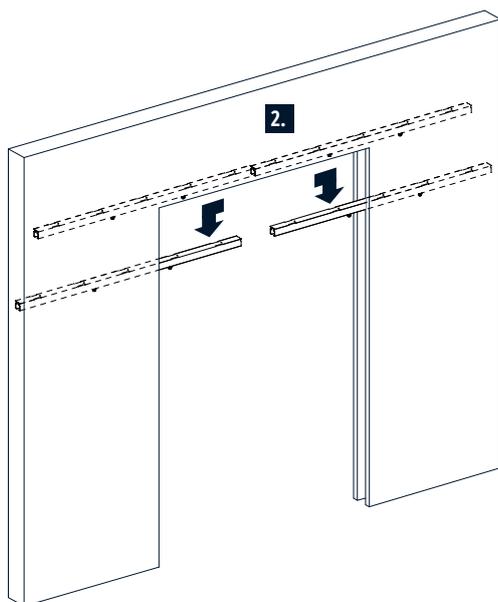


2.

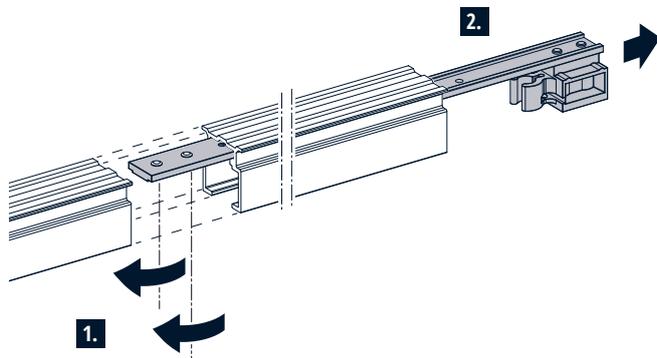

3.

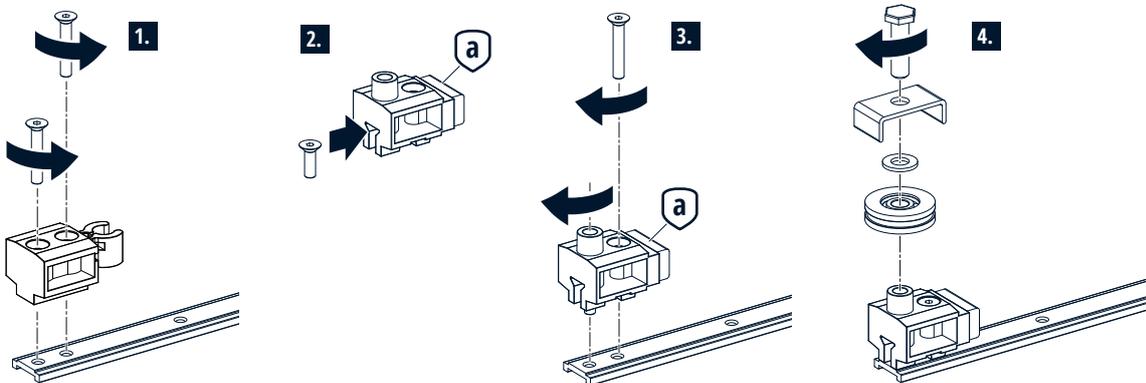





4.

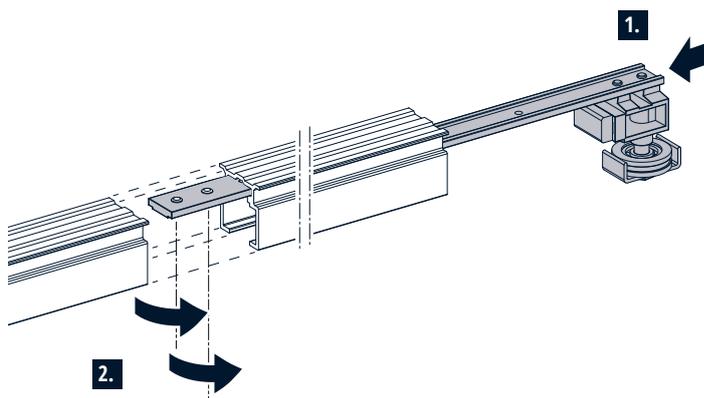

# ASSEMBLY | SYNCHRO BELPORT



5.

---

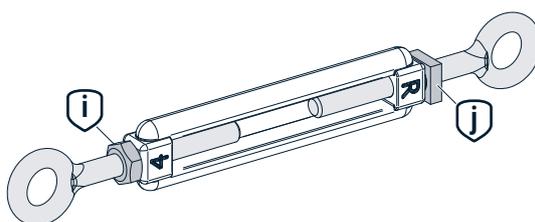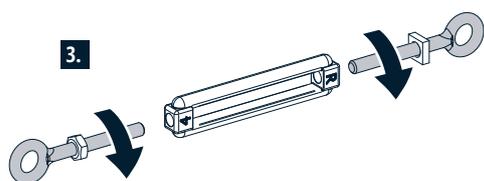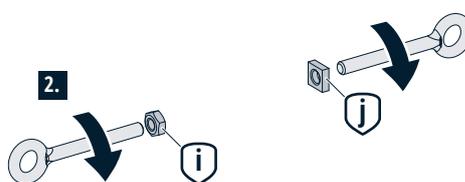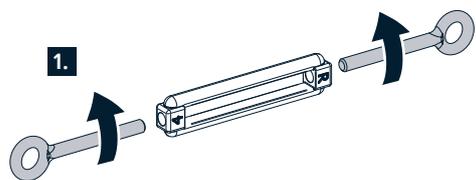


6.

**!** Component "e" only for BELPORT with wooden door leaf mount!



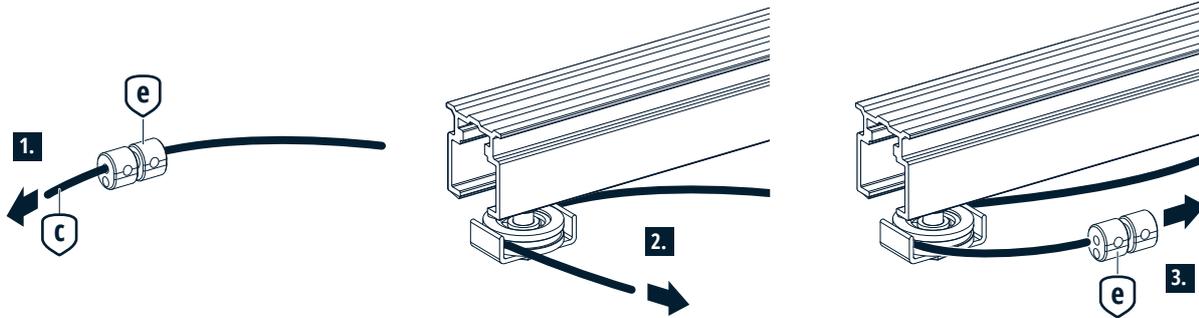
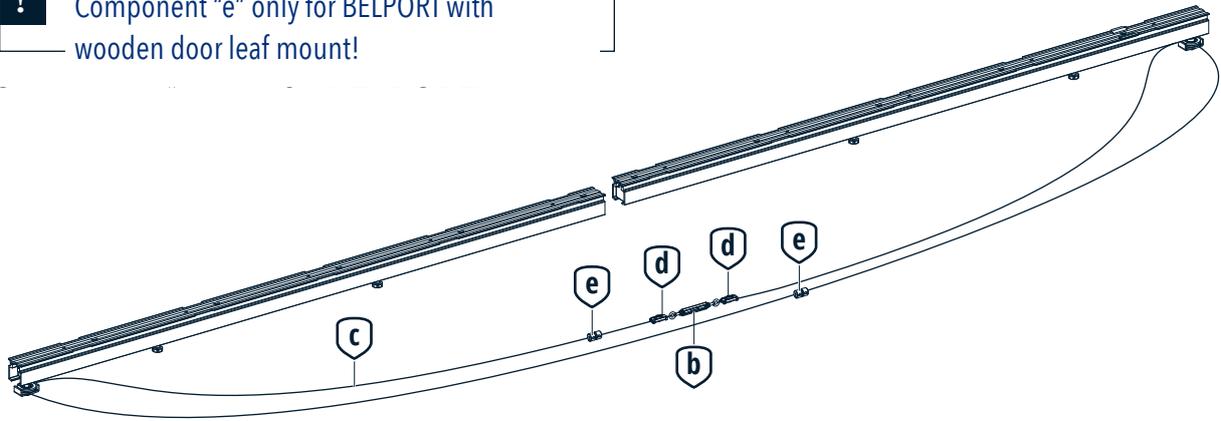


**!** The grub screws must point toward the door leaf.

**!** The grub screws must point toward the door leaf.




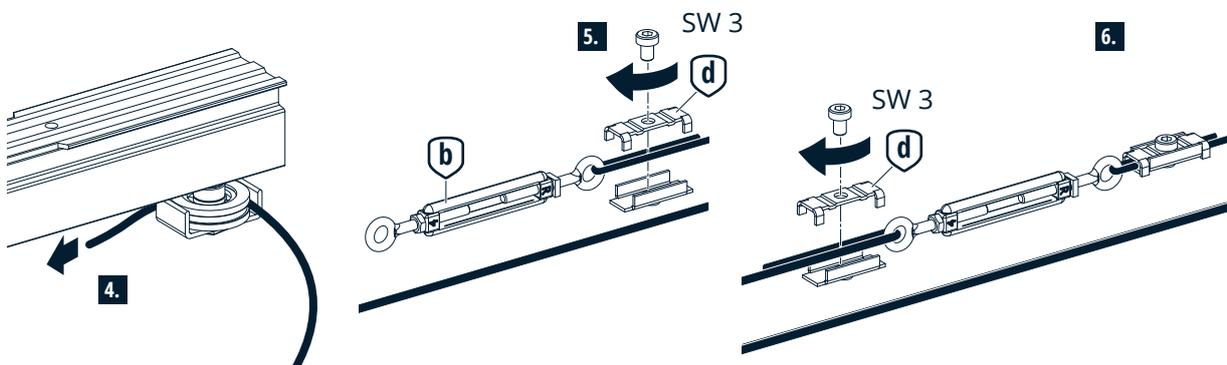


7.

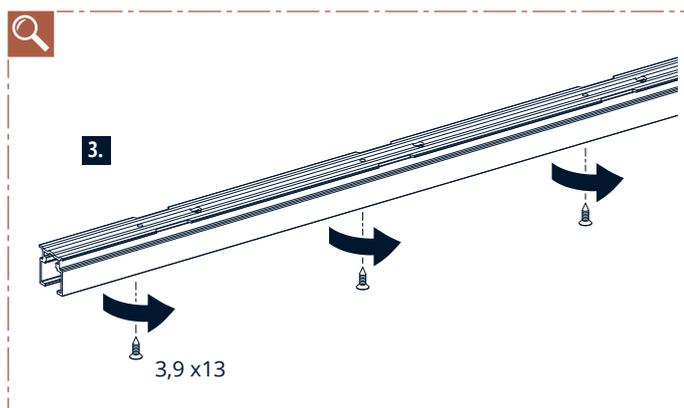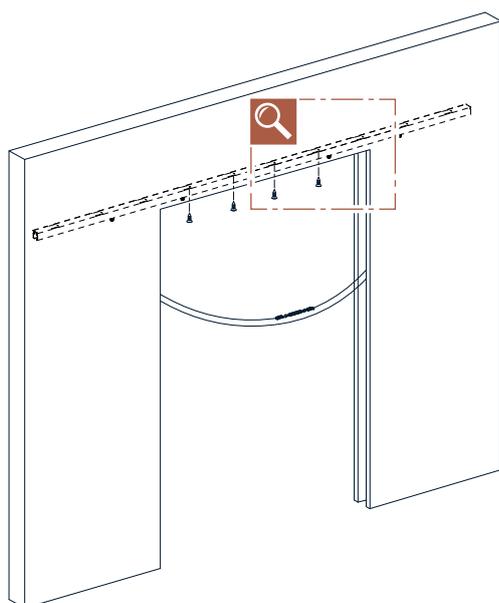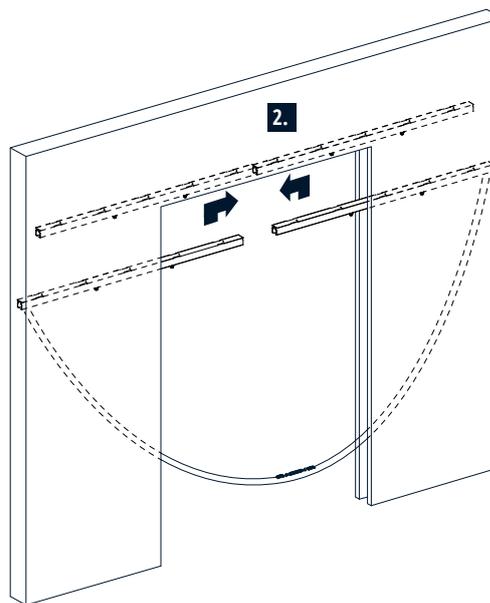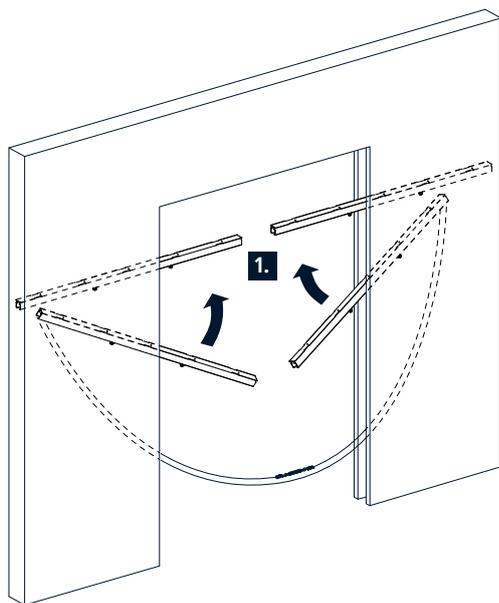





**!** Install all of the screws removed in Step 1.  
Move the components in the running track  
if they cover the threads.

8.

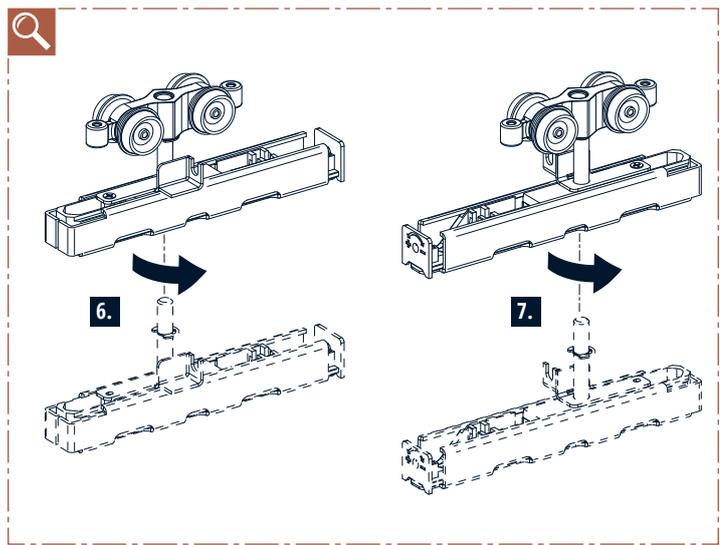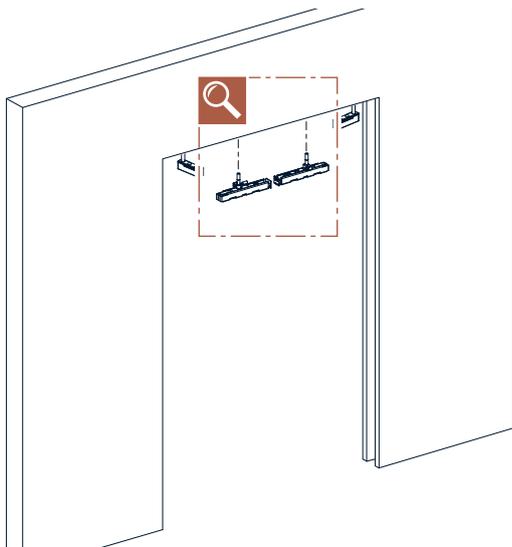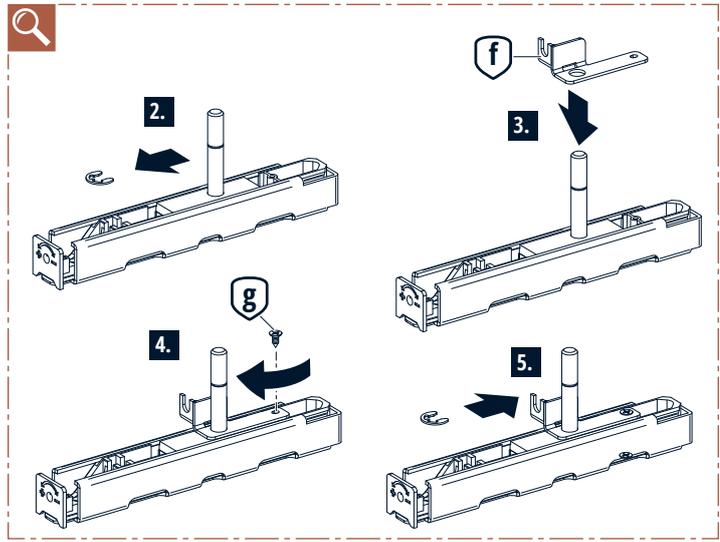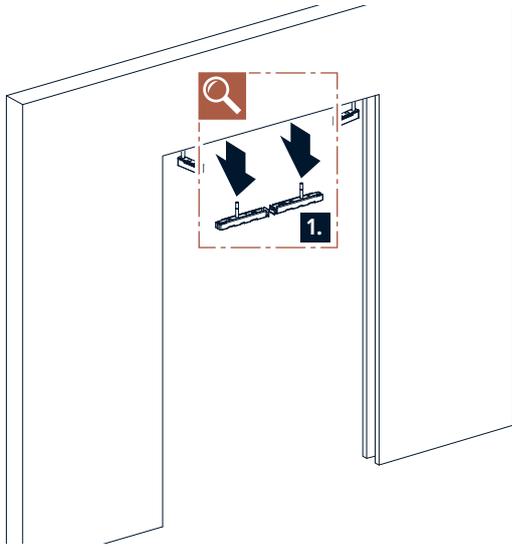







# ASSEMBLY | SYNCHRO GLASS DOOR

8.

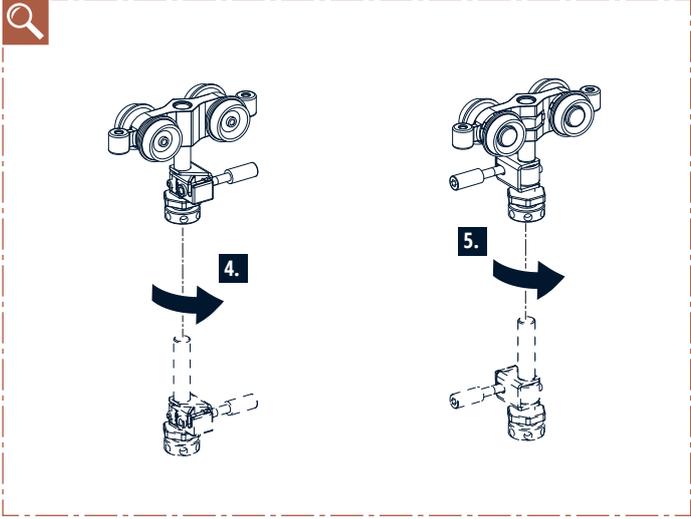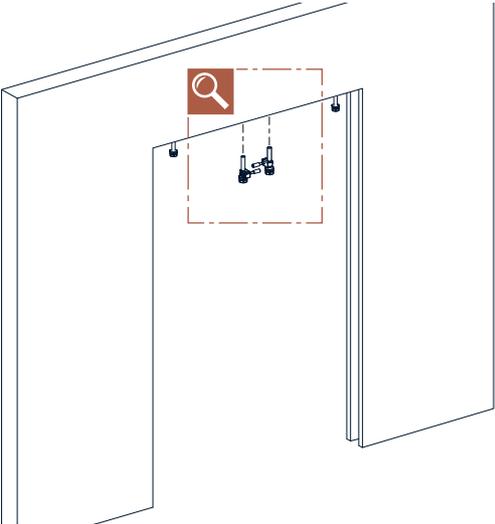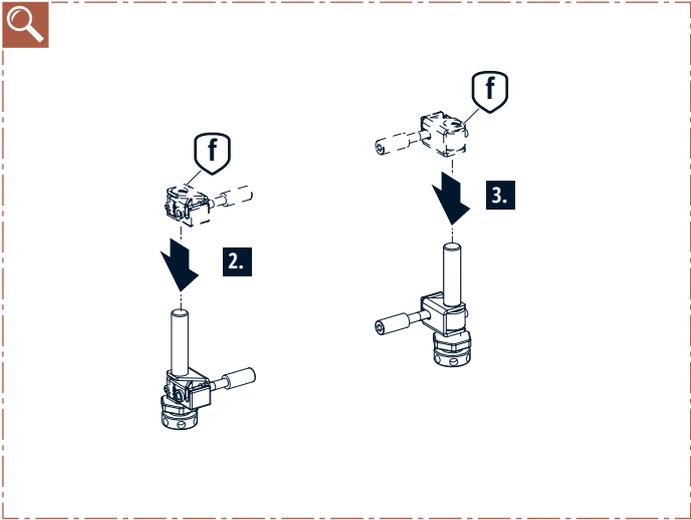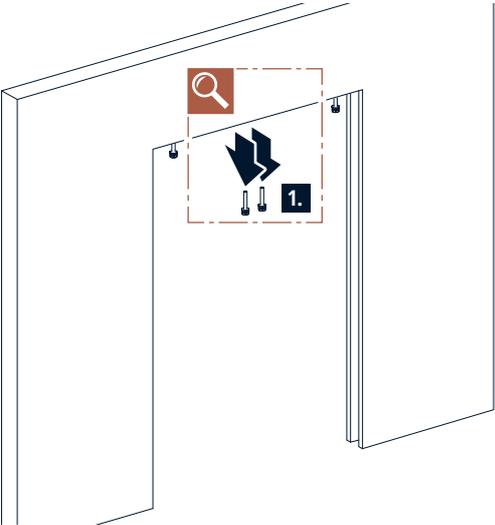

# ASSEMBLY | SYNCHRO WOOD DOOR






9.

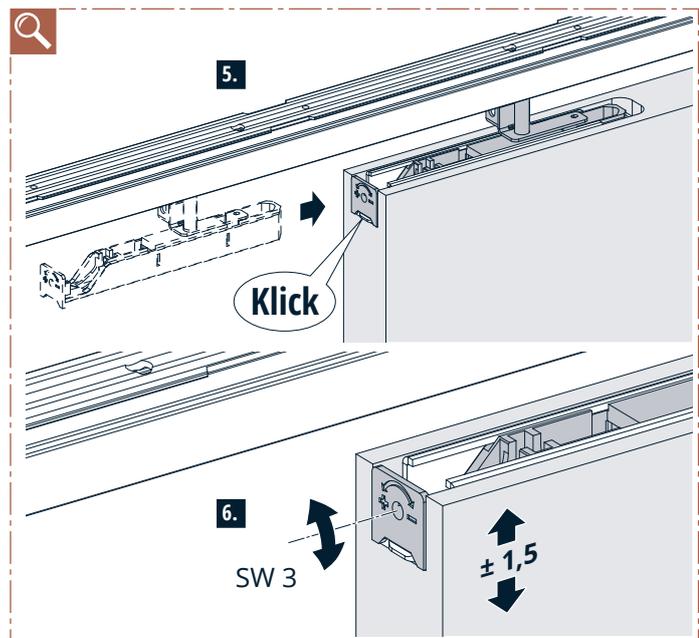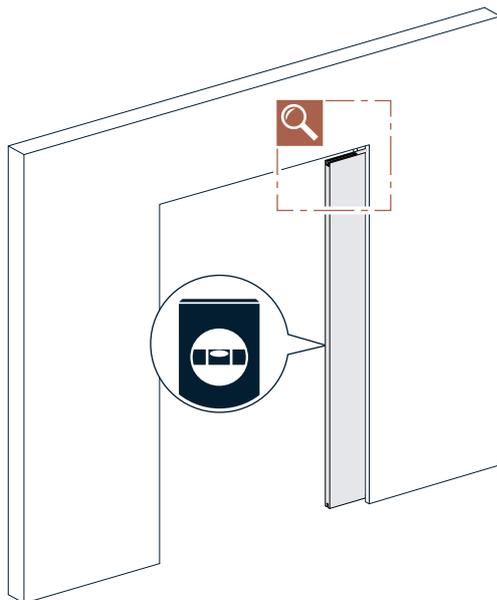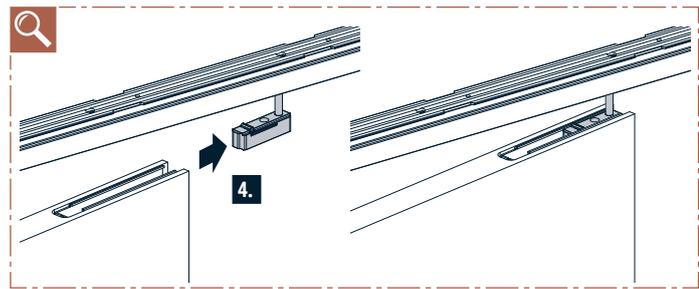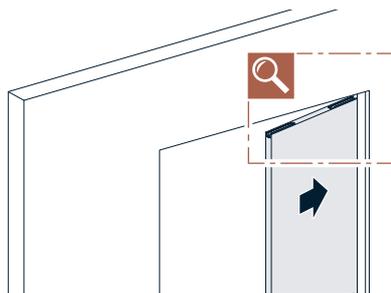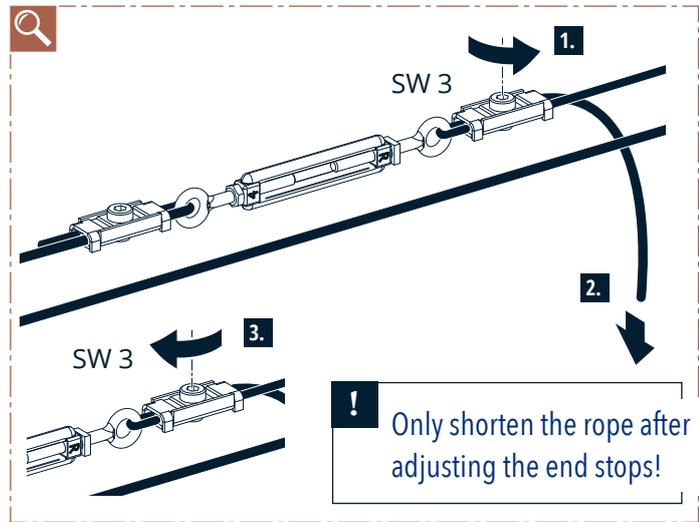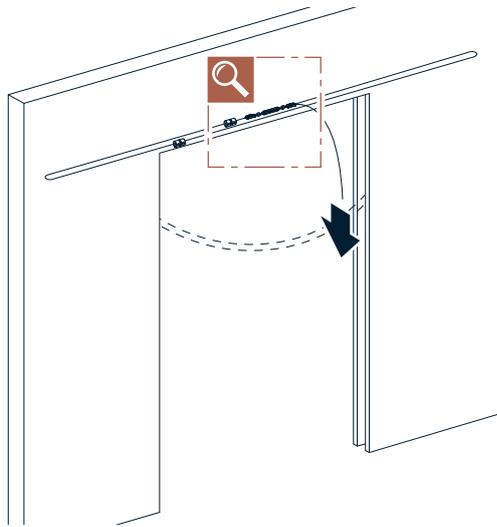


! The second door is installed in mirror image.

# ASSEMBLY | SYNCHRO GLASS DOOR

9.

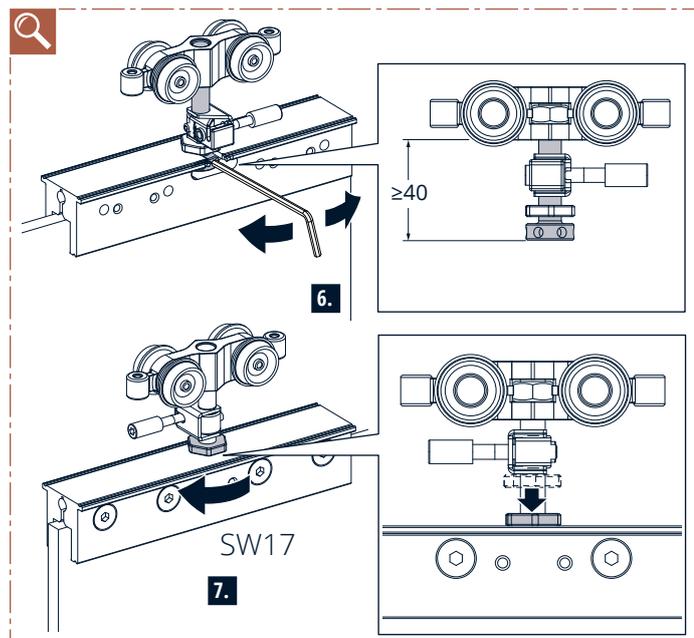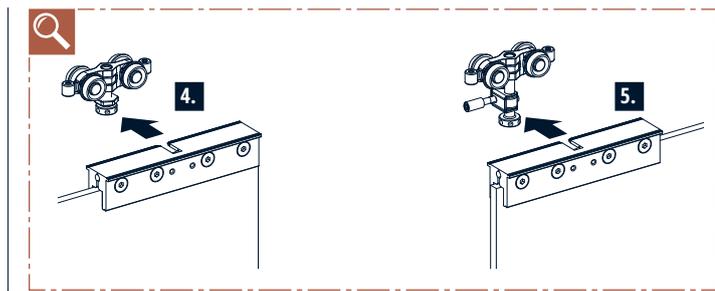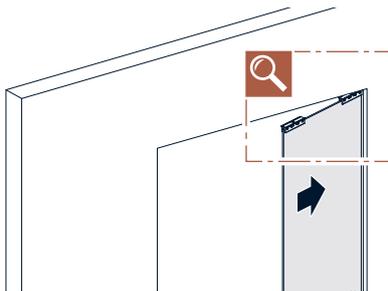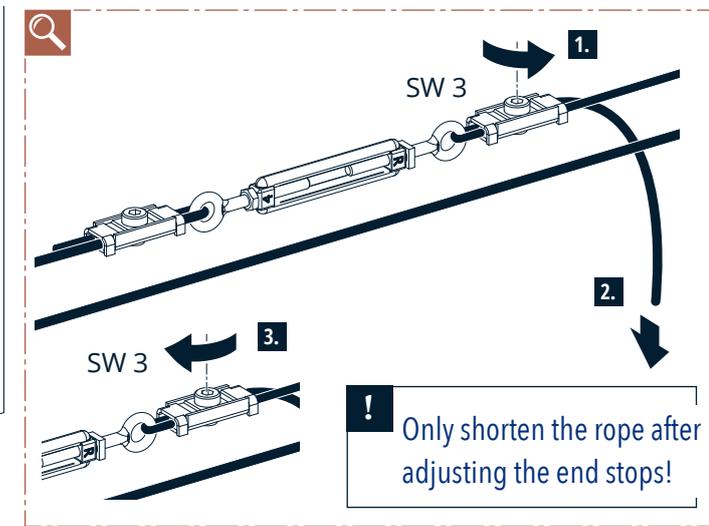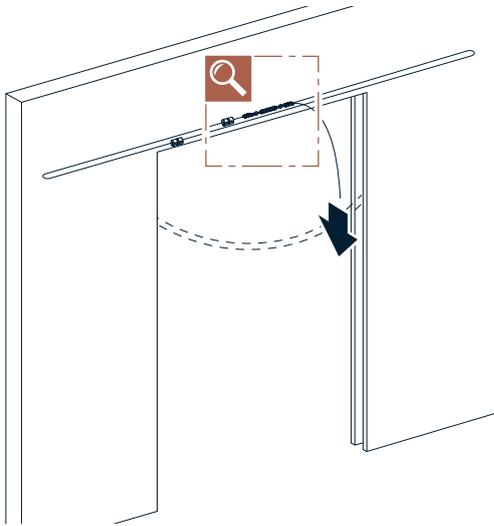


10.

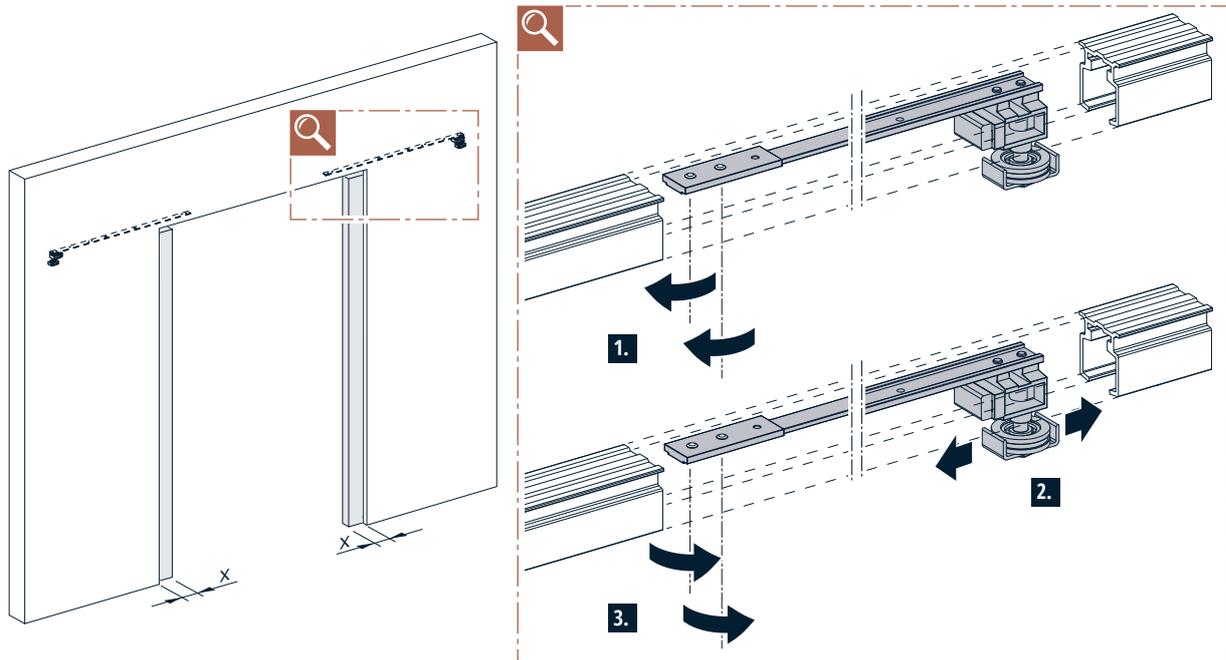


**!** The adjustment of the opposite stopper is carried out in mirror image.

# ASSEMBLY | SYNCHRO BELPORT

11.







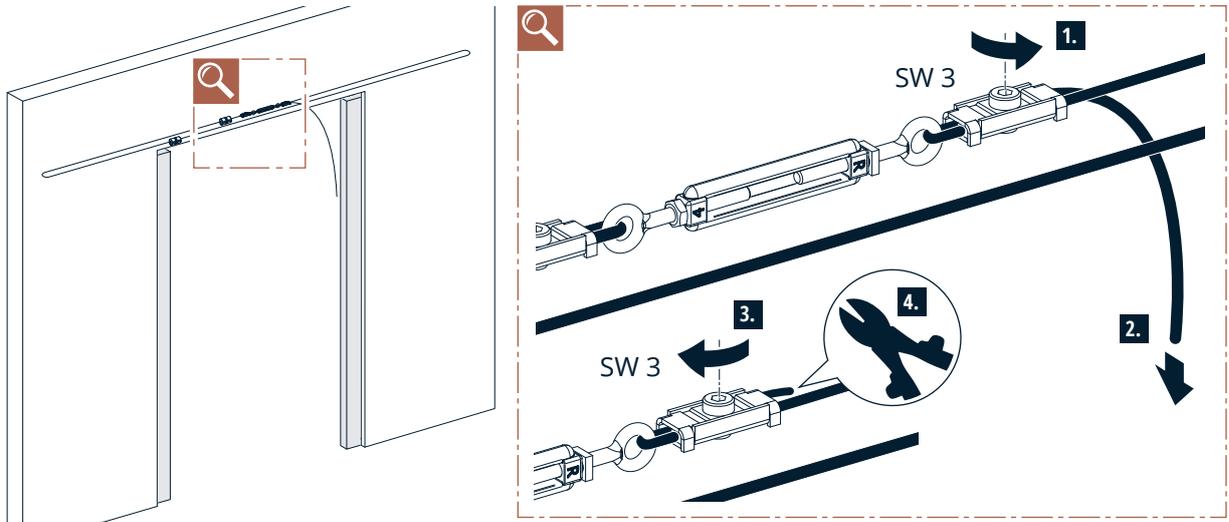


12.

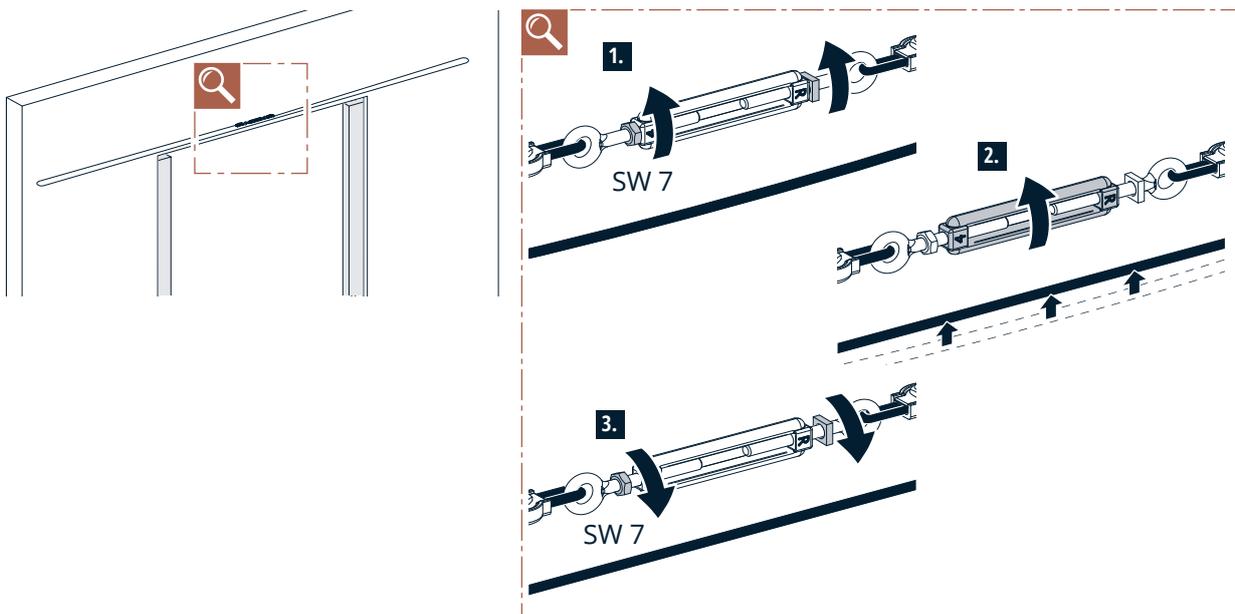







**!** Tighten the lock nuts to prevent loosening!

13.

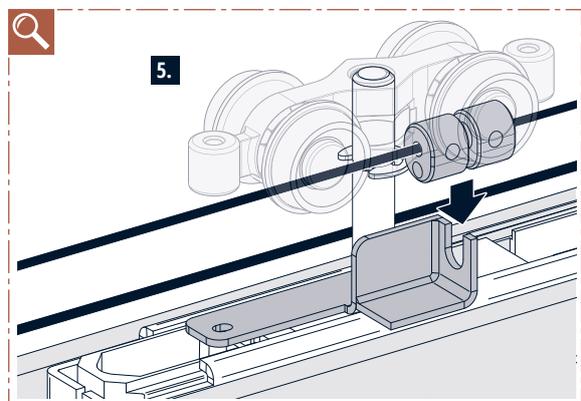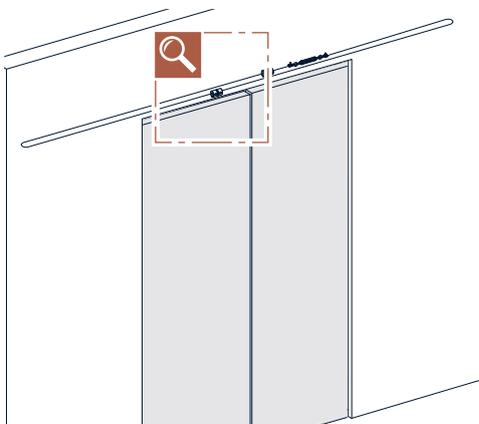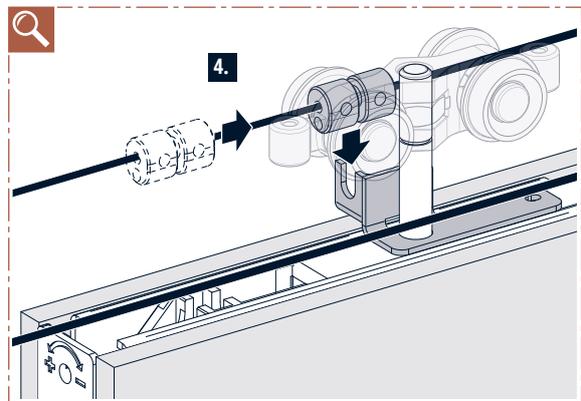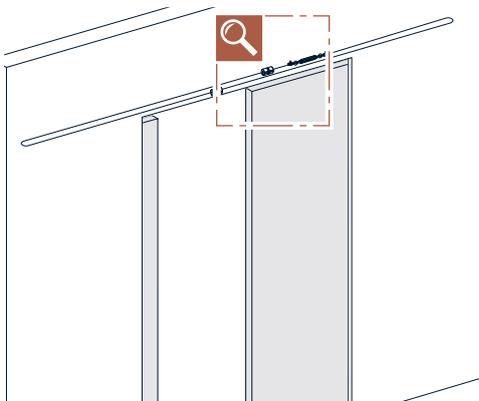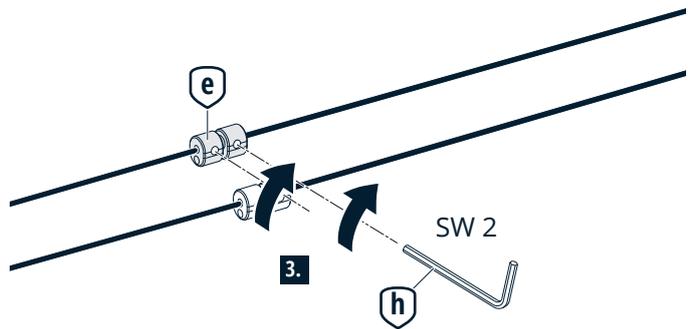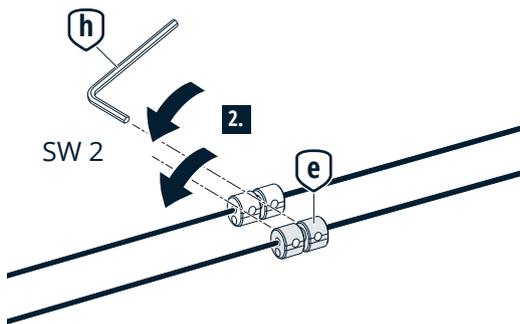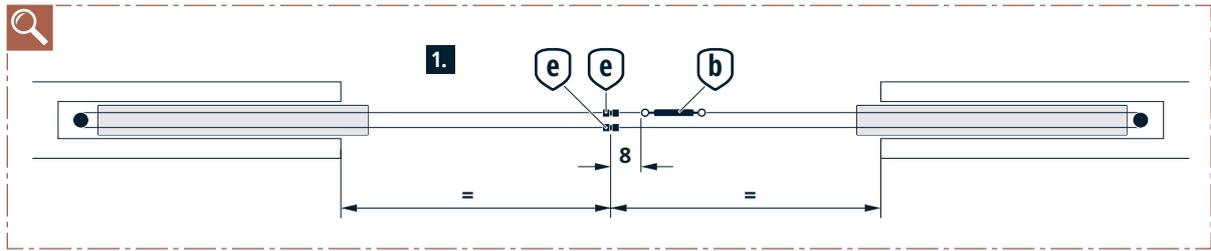

# ASSEMBLY | SYNCHRO GLASS DOOR

13.

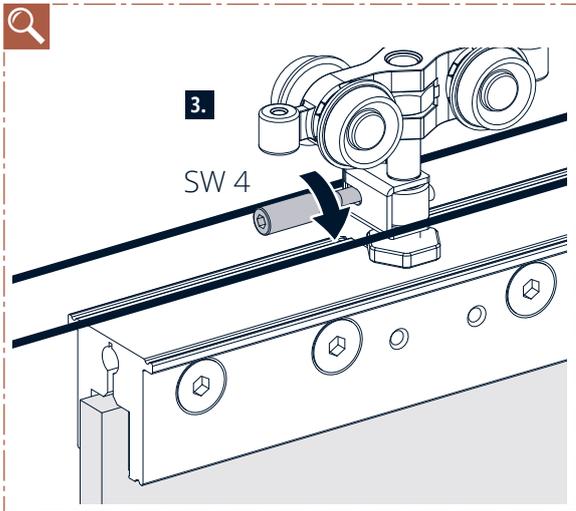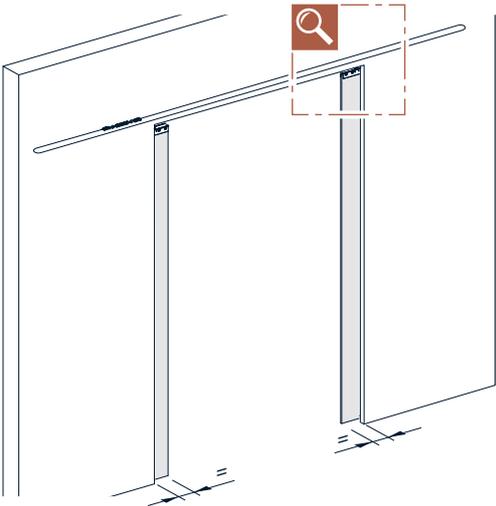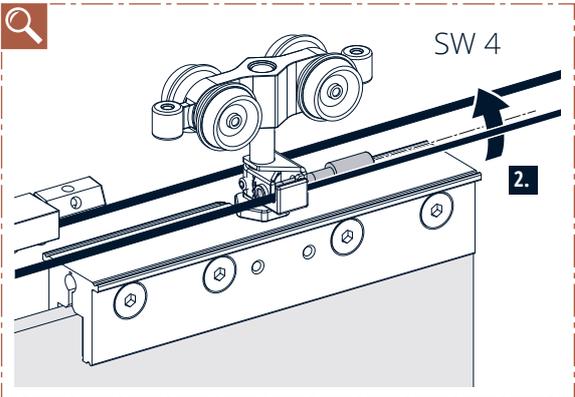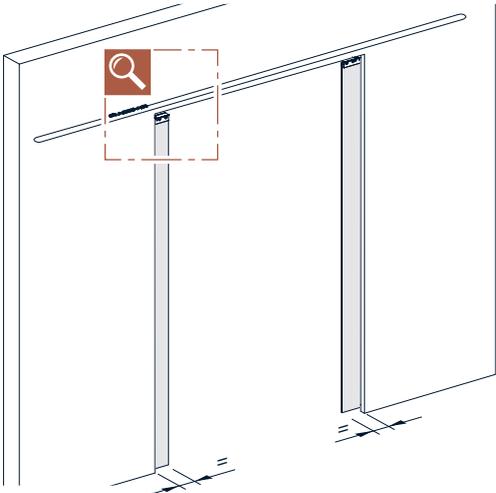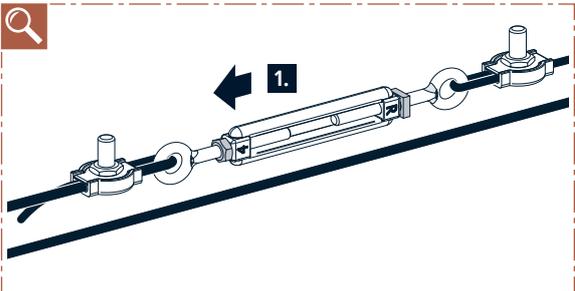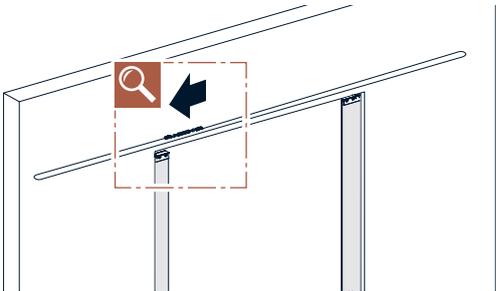



**WINGBURG**

 **+49.5257.94792-0**  
 **info@wingburg.de**  
 **www.wingburg.de**